



Base

Base cladding flush with perimeter insulation

Detail A1

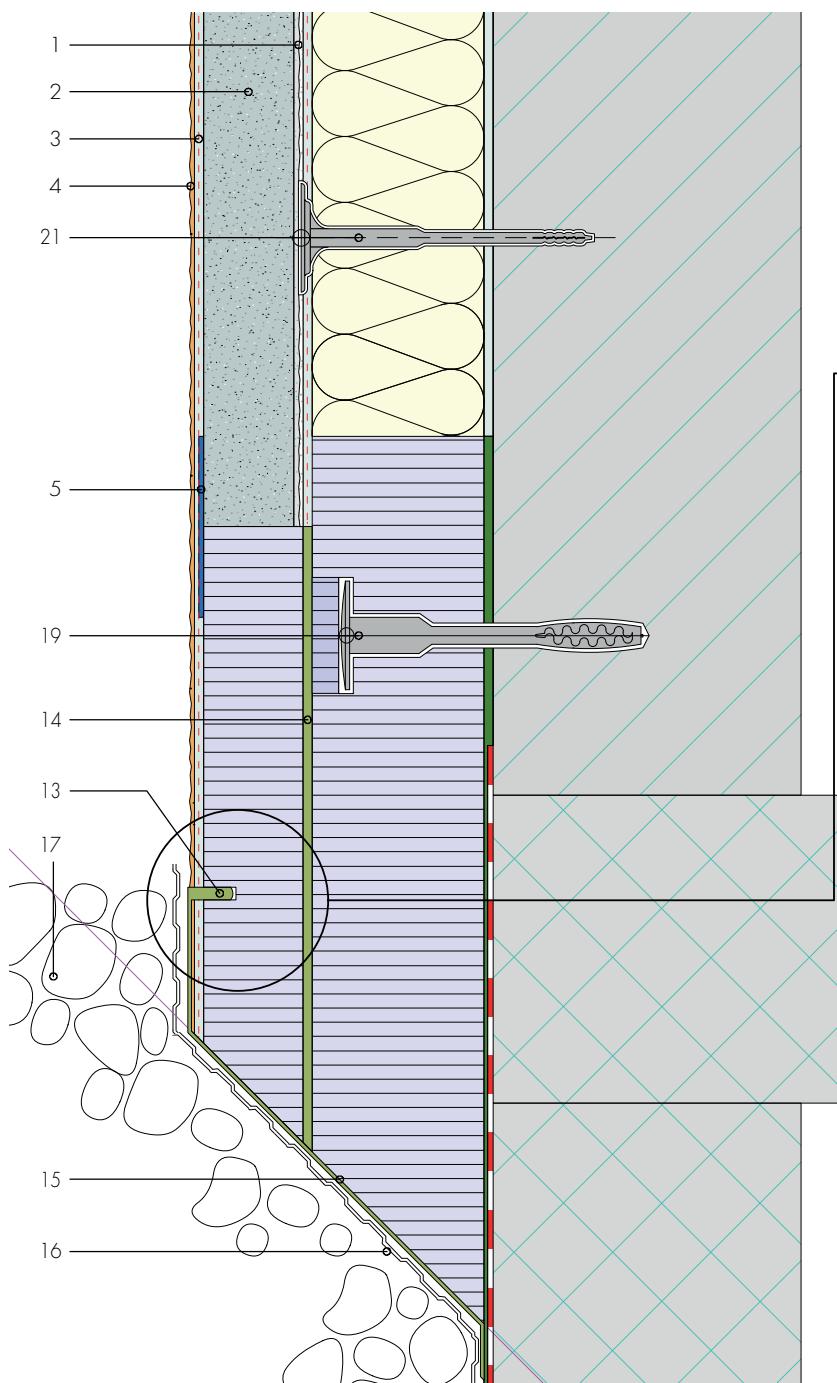

Detail of capillary slot 5 to 8 mm wide.
Fill with Fixit 373 Multiflex

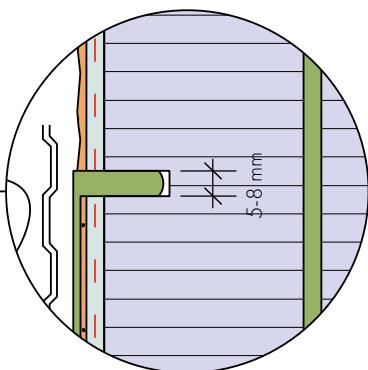

- 1 Substrate preparation
Fixit 462 Renovation plaster or Welnet
- 2 Fixit 222 Aerogel high performance insulation plaster
- 3 Fixit 223 Embedding mortar with embedded fabric
- 4 Mineral finishing coat
- 5 Barrier textile
- 13 Capillary slot
- 14 Base cladding, outer surface completely covered with Fixit 373 Multiflex
- 15 Apply a layer of Fixit 373 Multiflex
- 16 Profiled drainage sheet
- 17 Rubble fill
- 19 Mounting anchor bolt
- 21 STRU 2G / S1 short Screw anchors