


Window reveal

Double French balcony without thermal bridges

Detail C2

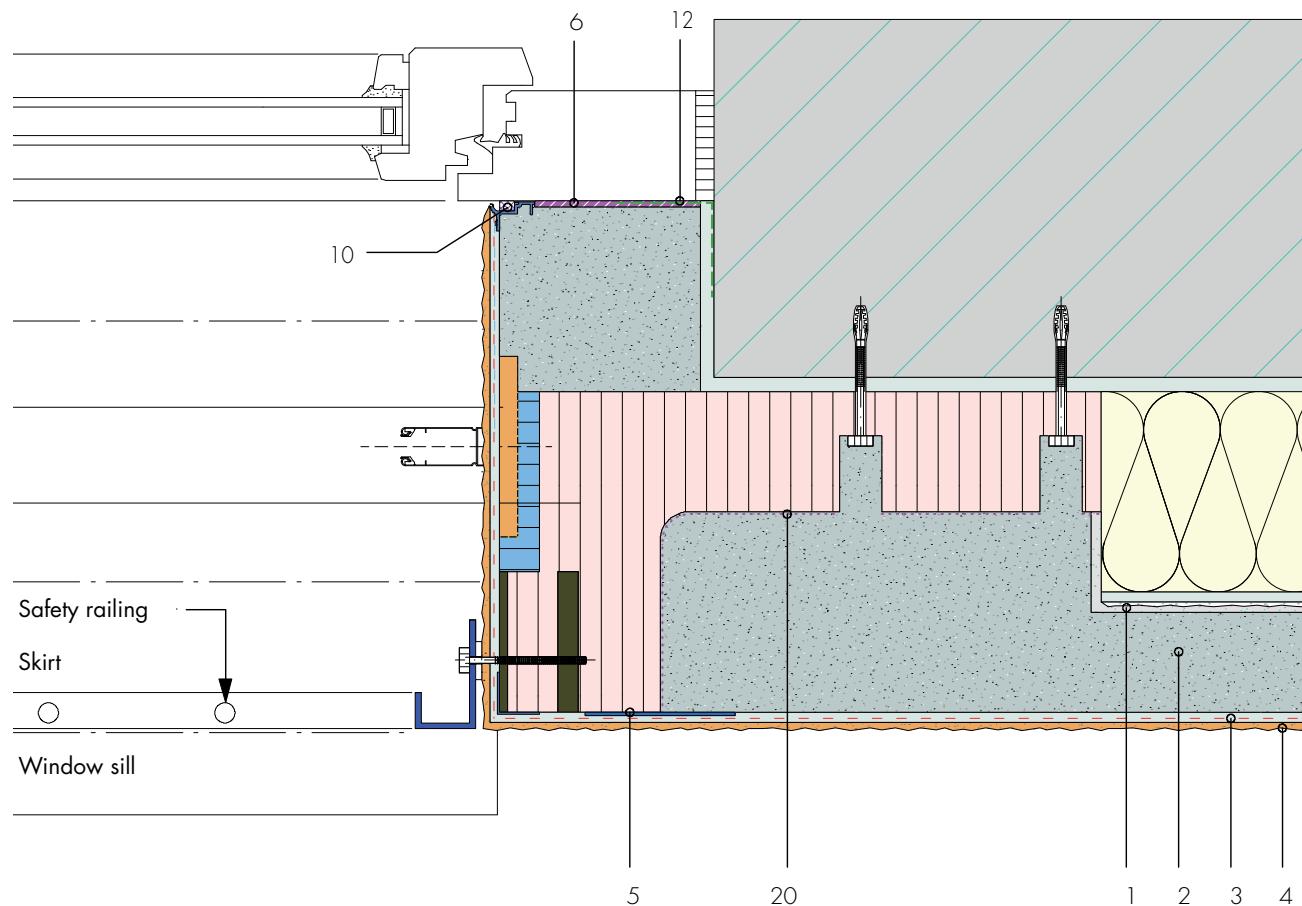

- 1 Substrate preparation Fixit 462
Renovation plaster or Welnet
- 2 Fixit 222 Aerogel high performance insulating plaster
- 3 Fixit 223 Embedding mortar with embedded fabric
- 4 Mineral finishing coat
- 5 Barrier textile
- 6 Thermal barrier tape
- 10 Jointing profile with fabric inlay, 3D Profi
- 12 Air-tight membrane
(fitted by building contractor)
- 20 Fixit 346 quartz special adhesive bridge