Bottom view

Overhanding edge formation with drip profile

Detail F1

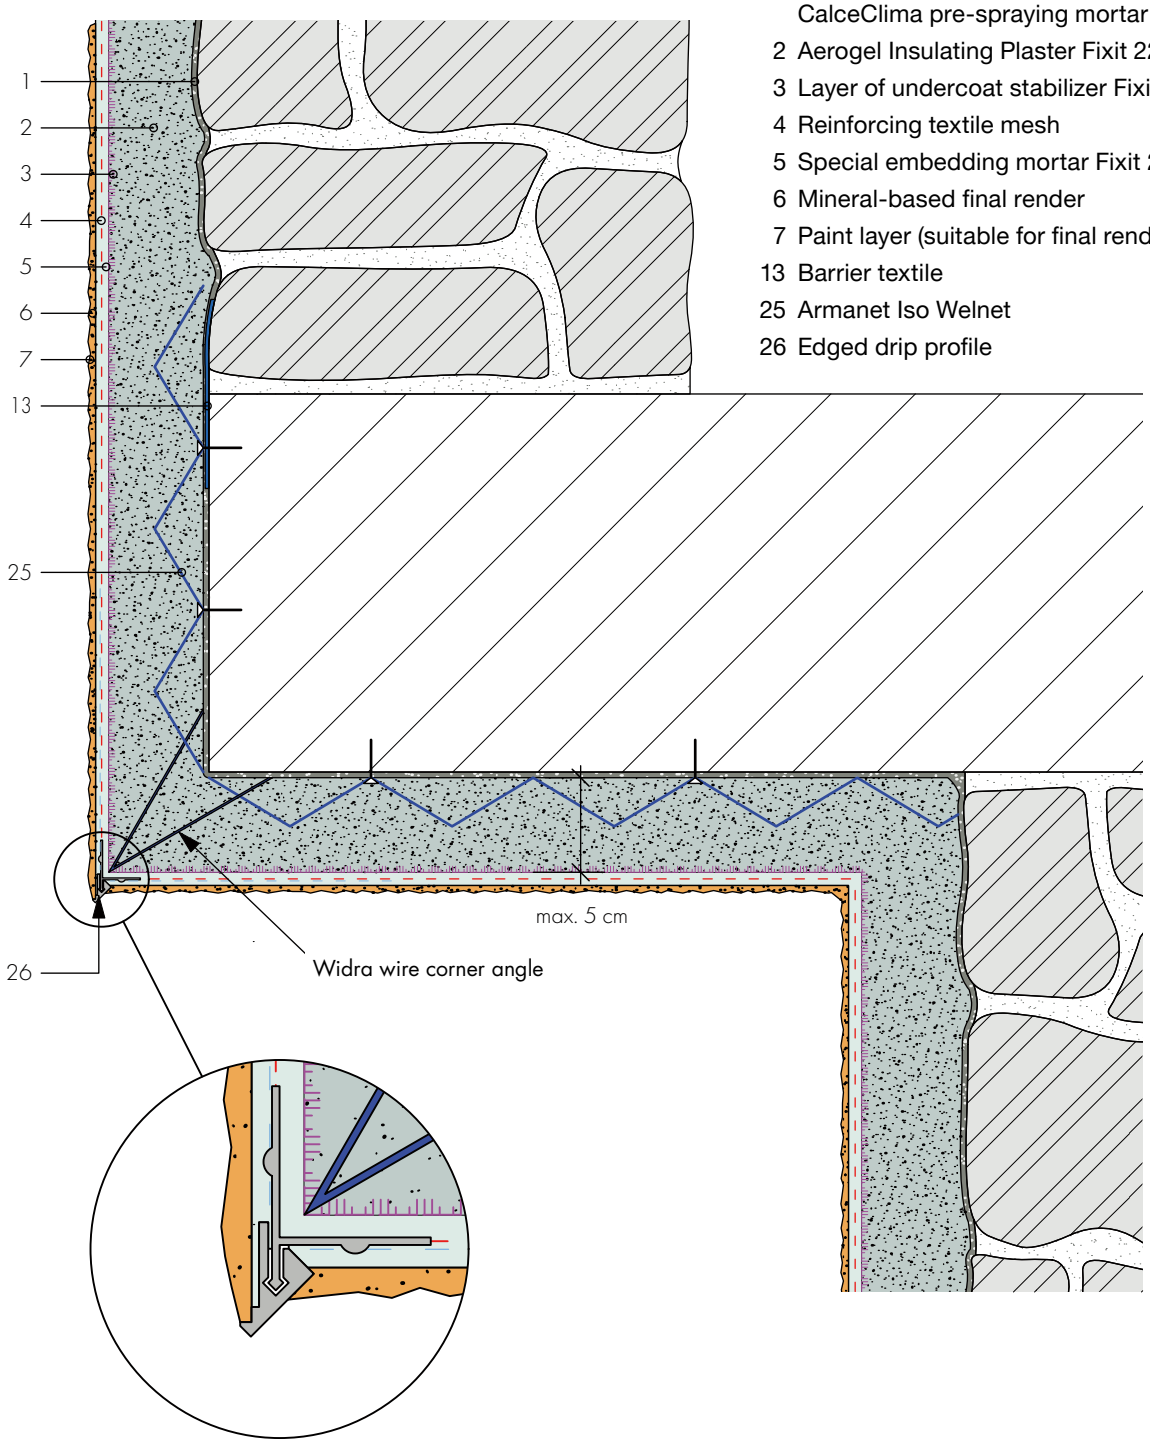

1 Roughcast mortar Fixit 211, Fixit 670 or Röfix CalceClima pre-spraying mortar
2 Aerogel Insulating Plaster Fixit 222
3 Layer of undercoat stabilizer Fixit 493
4 Reinforcing textile mesh
5 Special embedding mortar Fixit 223
6 Mineral-based final render
7 Paint layer (suitable for final render)
13 Barrier textile
25 Armanet Iso Welnet
26 Edged drip profile

This design detail is purely informative and corresponds to our current state of knowledge. It is only a general reference and does not take into account the specific application. Our General Terms and Conditions apply. We reserve the right to make changes at any time. Replaces all previous design details.